


Demontage / Montage Innenzylinder Removal / Moval of barrel

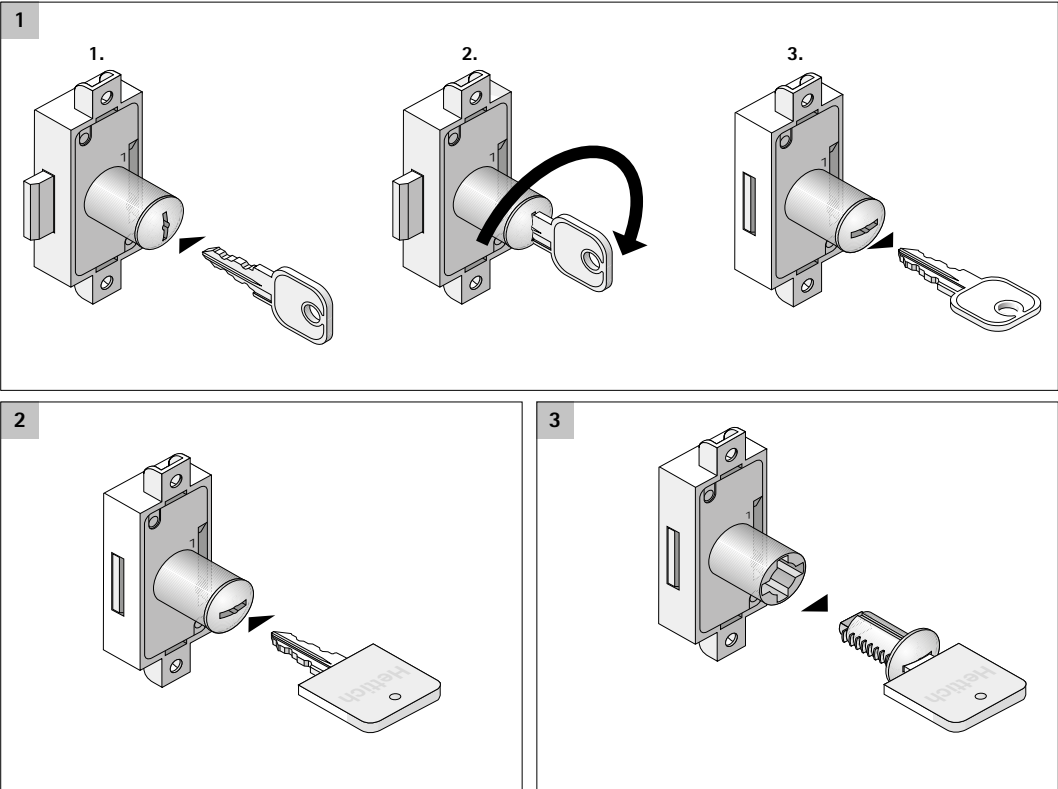


Demontage



2

3

Montage

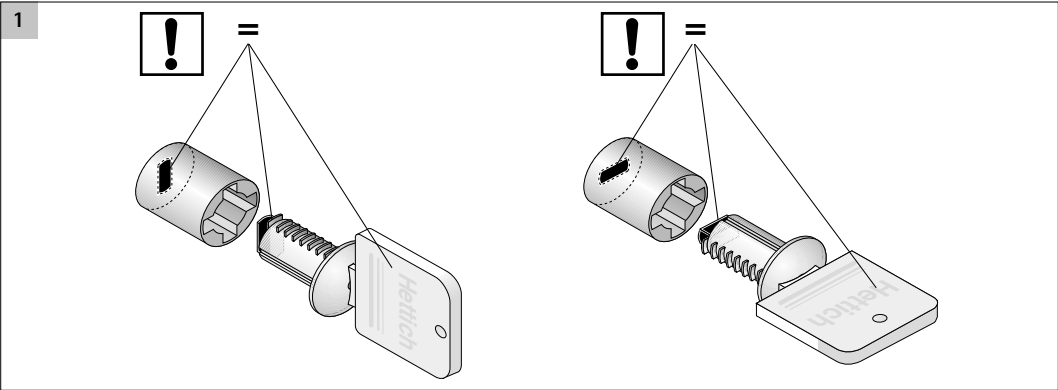

!

=

!

=