

# Planet BL


**Application: for radiation protection doors with a lead insert of thickness 0,5 up to 4,0 mm**

**Versions: felt with lead insert**

## Mounting instructions: control knob on hinge side

- 1 Clearance between door leaf and floor:** minimum 5 mm up to max. 18 mm.
- 2 Groove size:** at least 40 mm deep and 13.1 mm wide, remoted as far as possible from the pivot (refer to fig. 2).
- 3 Shorten:** max. 100 mm with reference to the control knob. Remove any existing sawdust.
- 4 Fastening:** fix it unilaterally with two nails on the lower door edge.
- 5 For wooden door frame:** drive home the stopping plate into the center of the pressure mark.
- 6 Lift height adjustment:** it is achieved by rotating the control knob with a 3 mm Allen key. Refer to figure 2 for the LH and RH adjustment.
- 7 In case of oblique floor:** tip up and detach the felt sealing strip, adapt it to the floor with a rough emery paper and attach it again.

**Important:** the Planet BL disposes of a great lift height multiplication, one turn corresponds to approx. 3 mm lift height difference. The blade must be tight on the floor at closed door only.

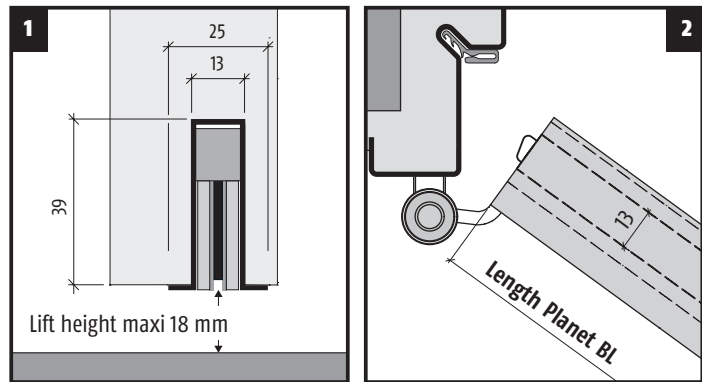

9.2.2012 / mc