


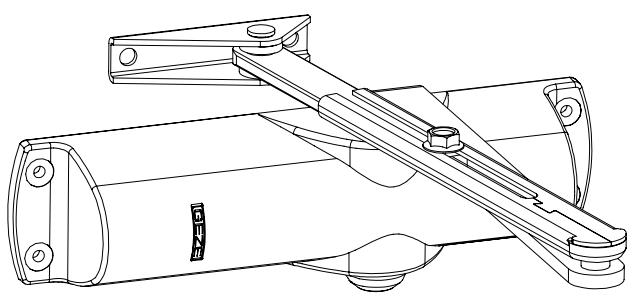

TS 1000 C

101833-07




GEZE

















A

B



EN2/3
 $a \leq 950 \text{ mm}$

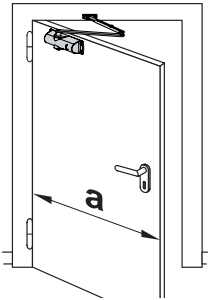



EN2/3
 $a \leq 950 \text{ mm}$

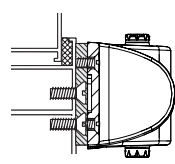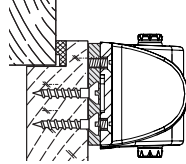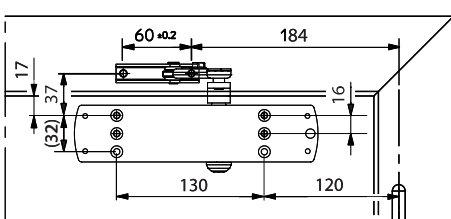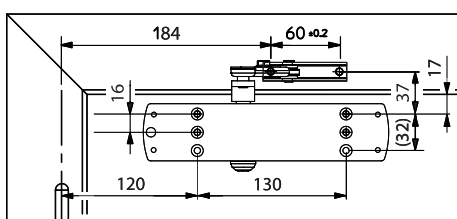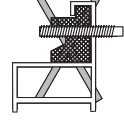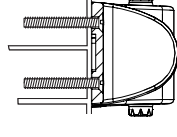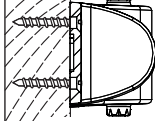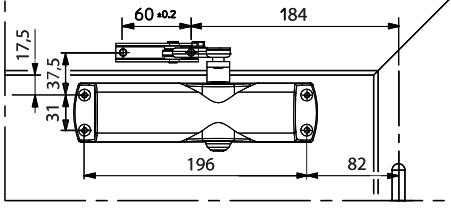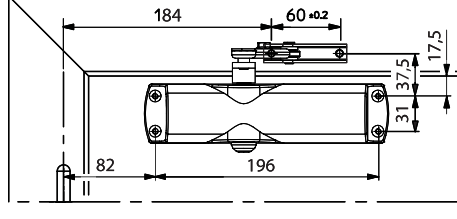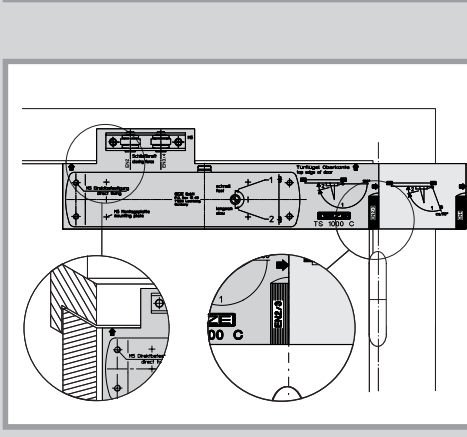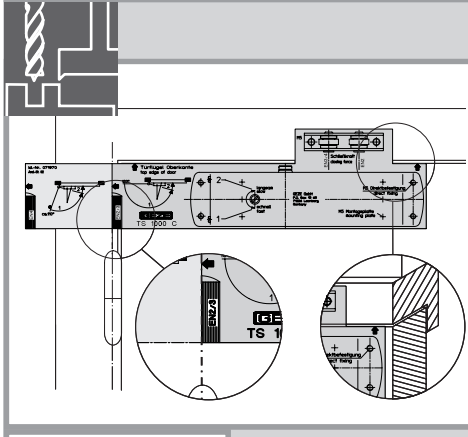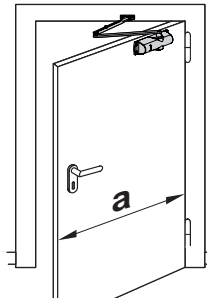

1

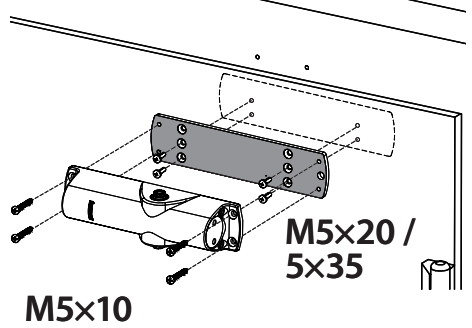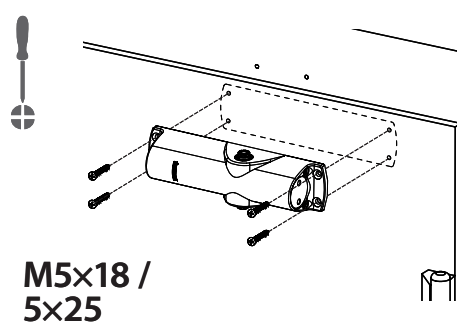


2

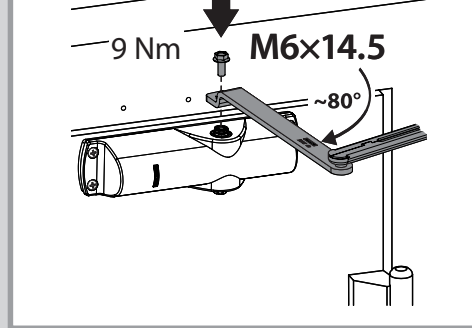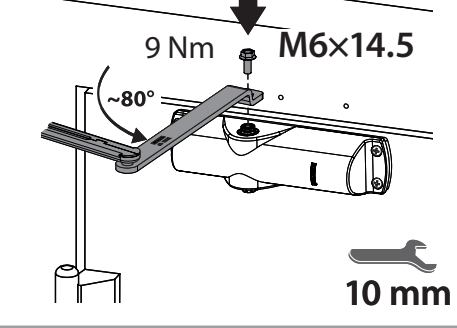


3

$a = 850-950 \text{ mm (EN3)}$

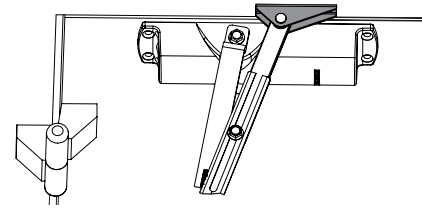



$a = 850-950 \text{ mm (EN3)}$

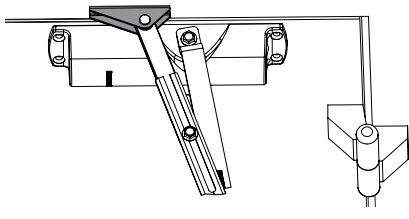


$a = < 850 \text{ mm (EN2)}$





$a = < 850 \text{ mm (EN2)}$

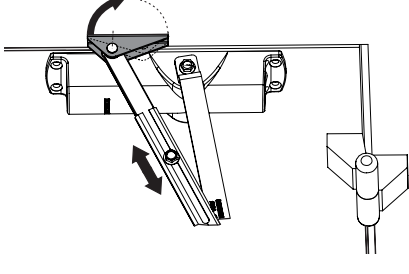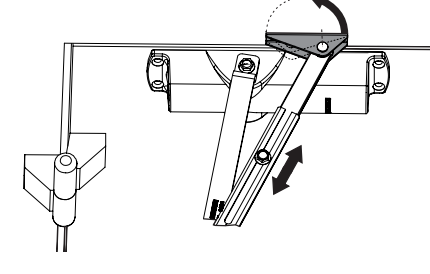




4

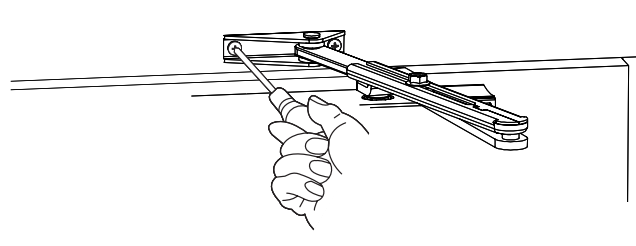


5

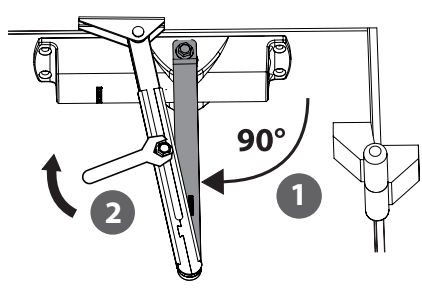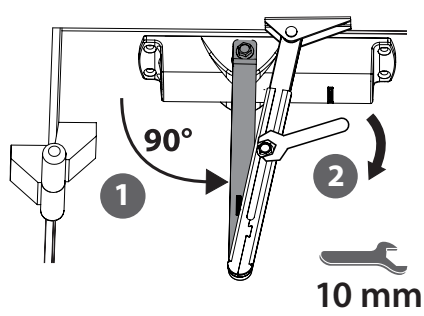

6

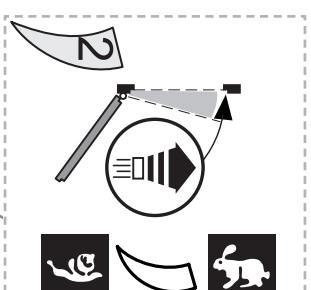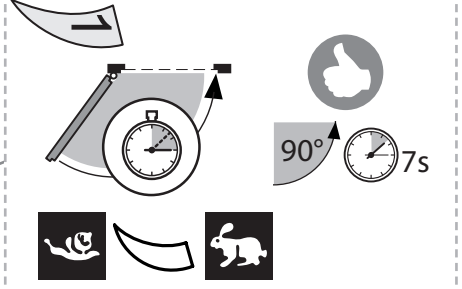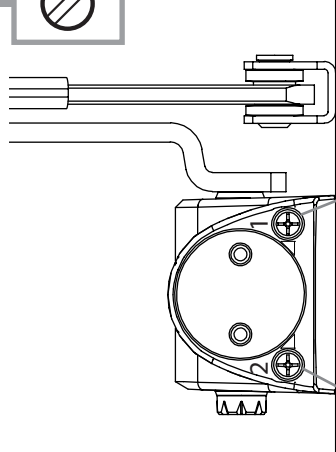


7

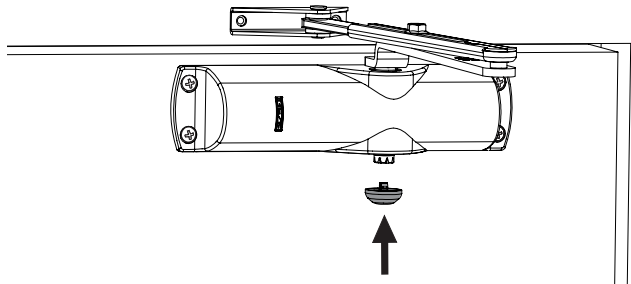

i



EN2/3

a ≤ 950 mm



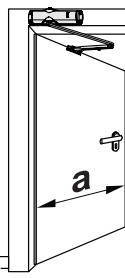


EN2/3




a ≤ 950 mm

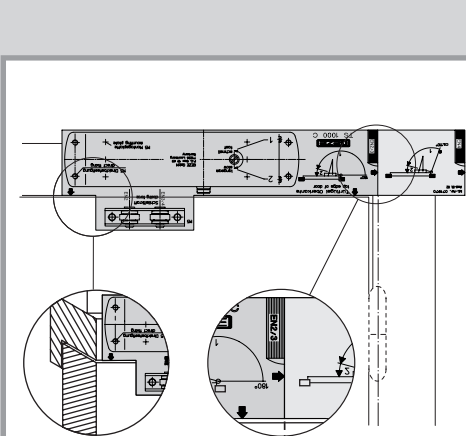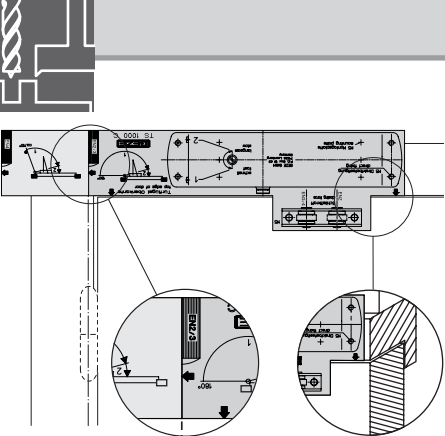

EN2/3

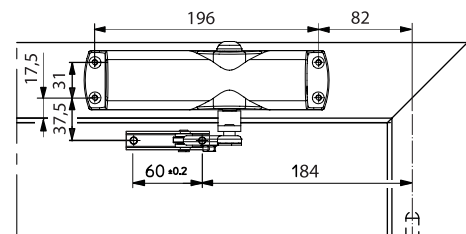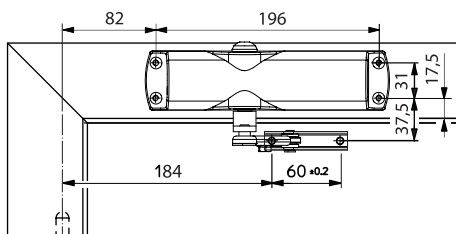


EN2/3

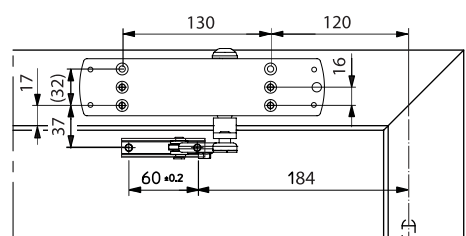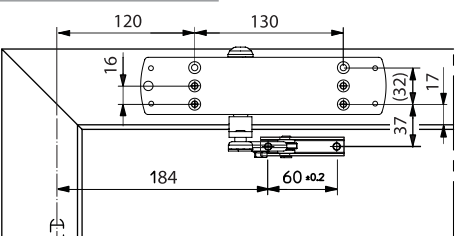

i




EN4

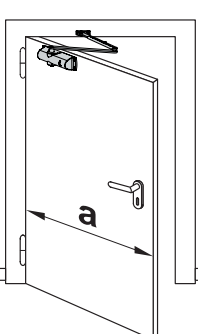a = 950 mm
-1100 mm




EN4

a = 950 mm
-1100 mm

i+

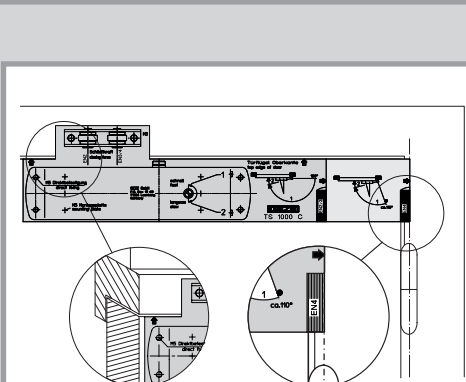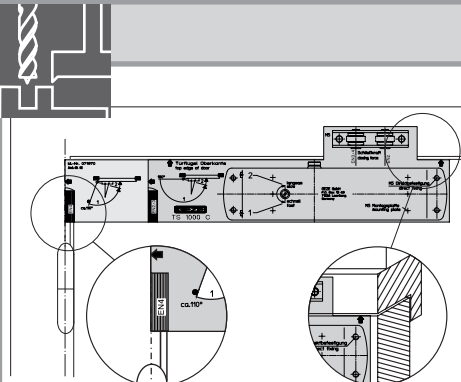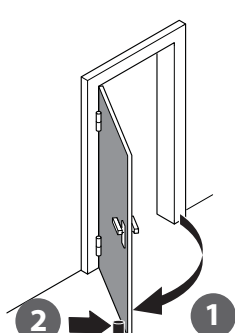

EN4

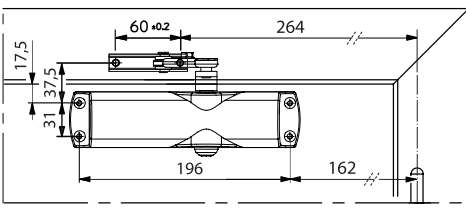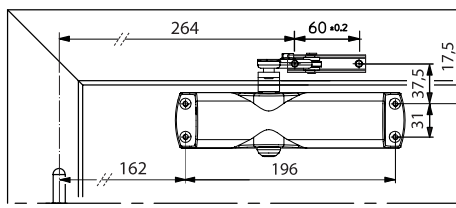

EN4

