

# PRESTIGE ADAPT

Montageanleitung "PRESTIGE ADAPT" für rechts- und links umstellbar Schlosser.

Beachten Sie die folgenden Hinweise bei der Montage von "PRESTIGE ADAPT".

- Der Riegel am Schloß muß herausgeschlossen sein.
- Stellen Sie das Schloß auf rechts oder links ein.


Bei **RECHTEN** Schlössern gehen Sie wie folgt vor:

- Stecken Sie den "PRESTIGE ADAPT" lose in das Zylindergehäuse am Schloß ein. Achten Sie darauf, daß die Markierungen am "PRESTIGE ADAPT" nach oben zeigt:
- gerader Strich – (Siehe Bild 1 unten).

Bei **LINKEN** Schlössern gehen Sie wie folgt vor:

- Stecken Sie den "PRESTIGE ADAPT" lose in das Zylindergehäuse des Schlosses. Achten Sie darauf, daß die Markierungen am "PRESTIGE ADAPT" nach unten zeigt:
- gerader Strich – (Siehe Bild 2 unten).
- Stecken Sie den Zylinderkern in den "PRESTIGE ADAPT". Stecken Sie den gelben Montageschlüssel in den Zylinderkern. Drehen Sie dann mit leichtem Druck (im oder gegen den Uhrzeigersinn) den gelben Montageschlüssel solange, bis die 3 Bauteile miteinander verrasten.
- Schließen Sie das Schloß mehrmals auf und zu, um eine Funktionskontrolle durchzuführen.

Bild 1 Schlosser – **RECHTS** – eingestellt  
Diagram 1 Locks – **RIGHT** – hand

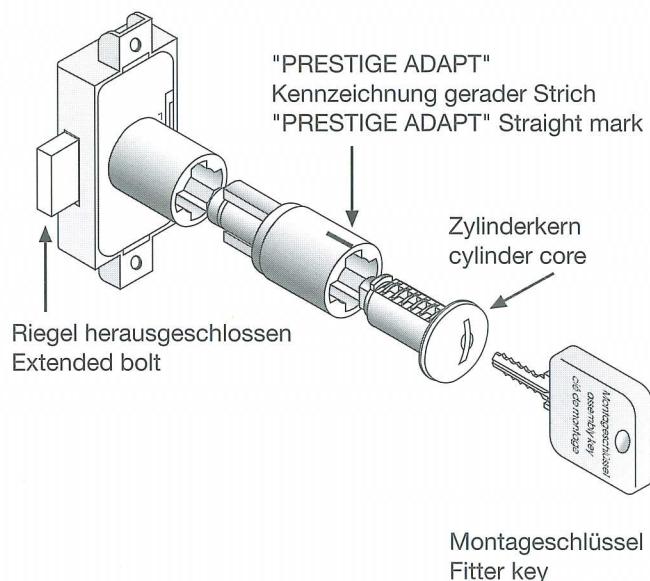

Assembly Instructions "PRESTIGE ADAPT" for right /left hand adjustable locks.

Please note the following points when fitting "PRESTIGE ADAPT".

- the bolt of the lock must be extended.
- adjust the lock to left or right hand as required.

With **RIGHT** hand locks proceed as follows:

- fit the "PRESTIGE ADAPT" loosely into the cylinder body of the lock. Ensure that the mark on the surface of the "PRESTIGE ADAPT" is facing upwards
- Straight mark – (see diagram 1 below).

With **LEFT** hand locks proceed as follows:

- fit the "PRESTIGE ADAPT" loosely into the cylinder body of the lock. Ensure that the mark on the surface of the "PRESTIGE ADAPT" is facing downwards.
- Straight mark – (see diagram 2 below).
- Place the cylinder core in the "PRESTIGE ADAPT". Insert the fitter key into the cylinder core and turn in any direction (applying light pressure) until the 3 components snap together.
- Open/close the lock several times to test function.

Bild 2 Schlosser – **LINKS** – eingestellt  
Diagram 2 Locks – **LEFT** – hand

